

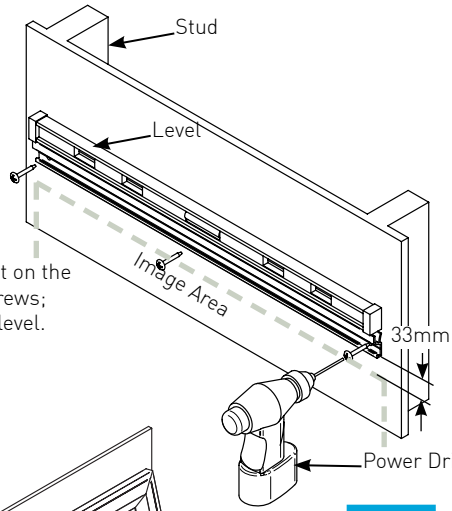


6

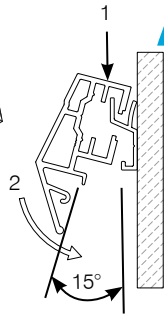


Screw EzyMount on the wall with 3 x screws; make sure it is level.

7



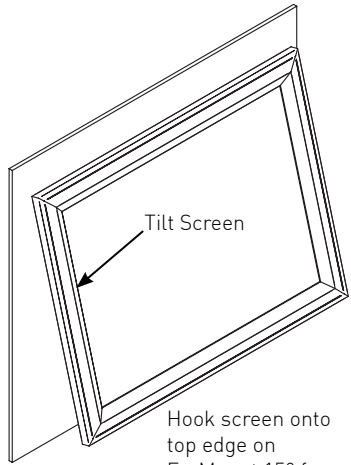


Hook screen onto top edge on EzyMount 15° from vertical then let it drop into position.

8

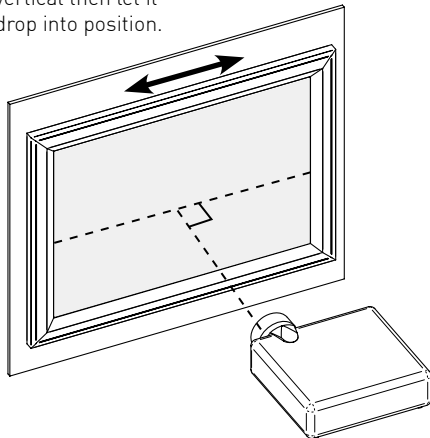


You can slide screen sideways until it lines up with the image horizontally. Make sure projector sits perpendicular to the screen.
Happy Viewing!

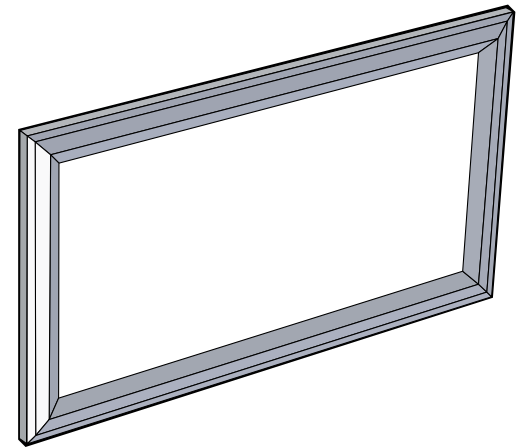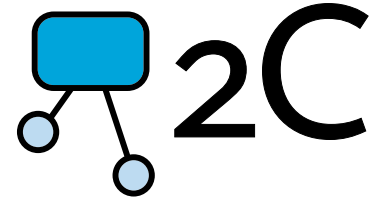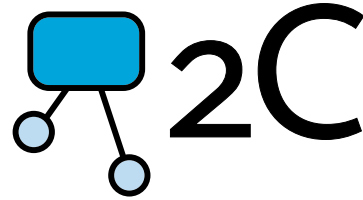


For more information please go to
www.2cdisplays.com.au
or call 1300 730 025

2C Frame Screen
Installation Manual

Required (not supplied)

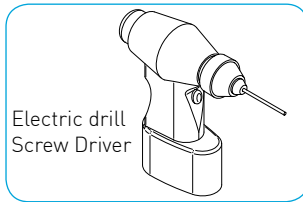

Electric drill
Screw Driver

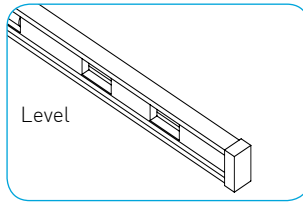


Level




3 x Screws
to suit Wall


Supplied

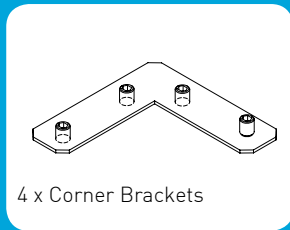


4 x Corner Brackets

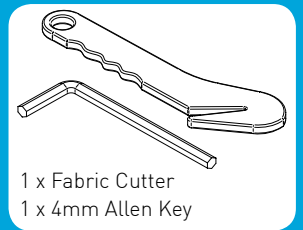


1 x Fabric Cutter
1 x 4mm Allen Key

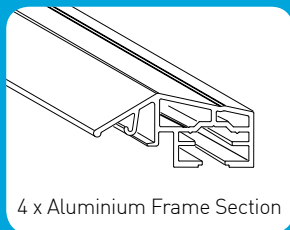


4 x Aluminium Frame Section

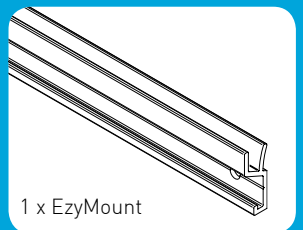

1 x EzyMount

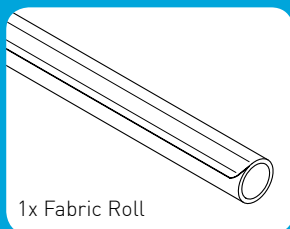


1x Fabric Roll

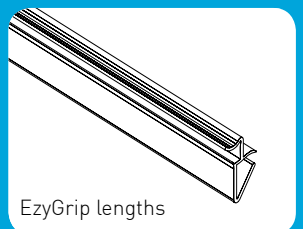

EzyGrip lengths


1

Lay each section of the frame face down as shown. Insert both short frame sections into the long frame sections with corner stakes. Ensure all joints are square and then lock off by tightening the grub screws.

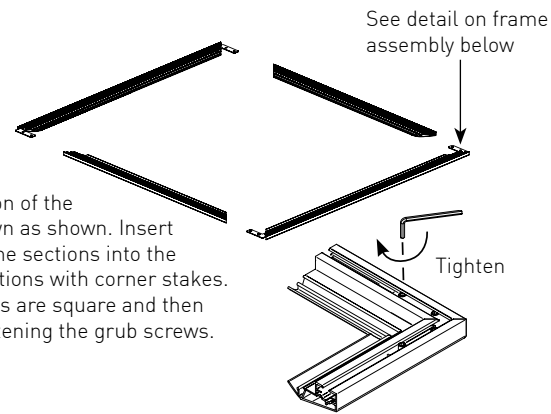

With frame still face down place fabric roll on edge of frame and roll fabric off the roll.


★Take note of "Viewing Side" label on fabric

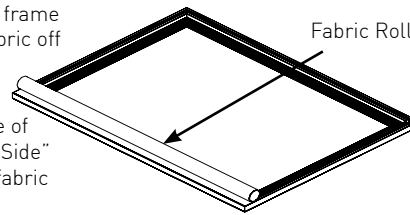

2

3

Stretch fabric over the back of the frame. Push the EzyGrip through fabric into the v-channel.


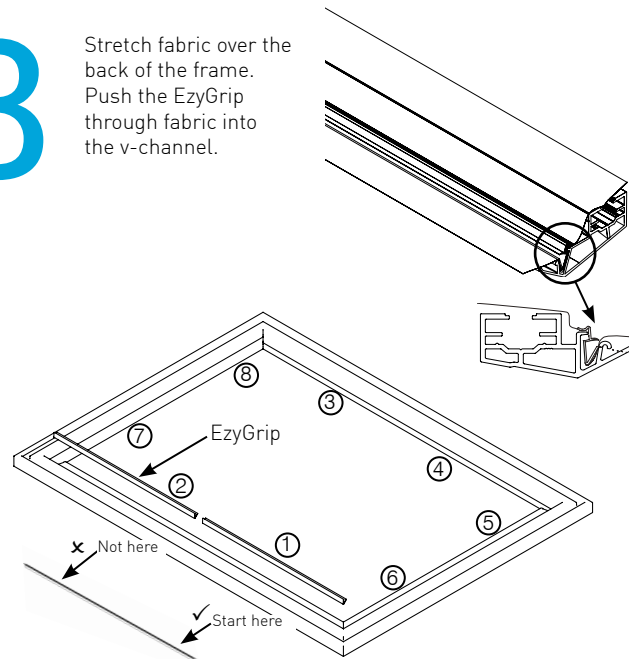


Tip: Insert the EzyGrip in the order shown above. Start at the edge of a EzyGrip length, but in the middle of the frame.



4

If creases or ripples have developed in the screen surface, don't panic. You can easily re-tension the fabric by pressing and holding the EzyGrip to release the fabric. To re-tension the fabric see the diagrams below.


To release the EzyGrip push the handle forward then lift up to remove. The fabric is now ready to be re-tensioned.

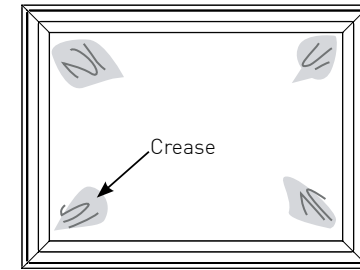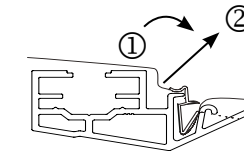

To re-tension the fabric, re-insert the EzyGrip and secure the fabric once more.

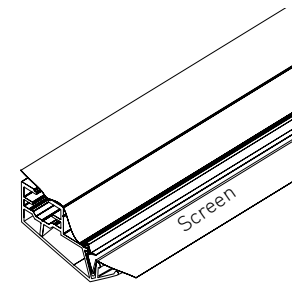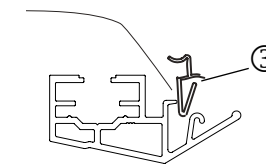

5

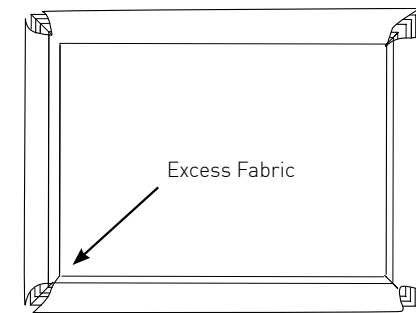

Once screen is free of creases, trim the excess material with the supplied fabric cutter.

