## Protecting your Screen

To ensure long lasting veiwing enjoyment, always keep the screen rolled up when not in use. Examine both the front and back surfaces before retracting into the case to make sure it is free of dust, dirt, insects or other foreign matter. Use a soft brush or cloth to lightly remove any foreign particles.

**CAUTION:** Do not let go of the screen when it is retracting. You can cause damage to the screen or casing by retracting too quickly.

# Cleaning your Screen

NEVER attempt to use any solvents, chemicals or abrasive cleaners on the screen surface.

Use a mild detergent with warm water to remove any marks on the surface or screen case. Always pat the screen dry with a soft cloth of towel after cleaning.



Size	Format	Image (mm)	Case Length (mm)	Weight (kg)
60"	4:3	1220 x 910	1380	4.5
80"	4:3	1630 x 1220	1790	5.4
60"	16:9	1330 x 745	1490	4.8
80"	16:9	1770 x 995	1930	6.2



Imported and Distributed in Australia by Herma Technologies Factory 4A, 6 Albert St Preston, VIC 3072

For more information please go to www.2cdisplays.com.au or call 1300 730 025





2C Show IT 2C406/407/408/409 User Manual


Oct 2009

#### To the owner


Congratulations on purchasing a 2C Show IT Protable Screen, designed to produce the sharpest, most pleasing pictures with maximum convenience.

### Using your screen


1. Lie the screen flat on the floor and swing out the feet so that they are perpendicular to the casing.

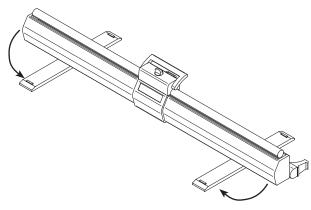


**2.** Stand the support rod up.

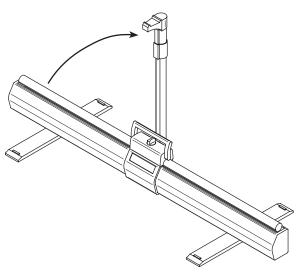


**3.** Extend the support rod to the desired height and lock into place.

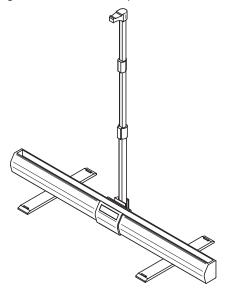

**4.** Pull the screen up and hook into the top of the support rod.

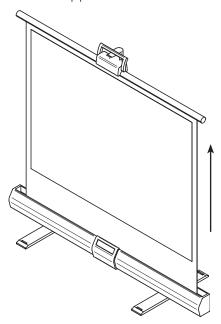

**5.** Lock the screen onto the support rod with the handle

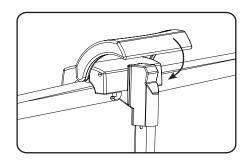

**6.** Extend the Support Rod to the desired viewing position and lock into place. The screen can be levelled using the adjustable feet.

Your screen is now ready for your viewing enjoyment.

### Putting your screen away

Lower the support rod to a comfortable height before unhooking the screen and gently lowering into the case.

Do not allow the sceen to fly into the case as this can damage the mechanism and ruin the screen material.

Lower the support rod. Fold the support rod and feet away.

Be sure the screen is properly secured before carrying by the handle.

