
# GV Adjustable Short Throw Projector Mount

### Parts:

GPCP-D is combined by GPCP and GPD

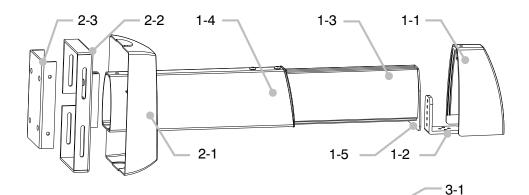



- 1-1 End Cap
- 1-2 'L' Bracket
- 1-3 Extender Arm
- 1-4 Main Arm
- 1-5 End Plate
- 2-1 Lower Cap
- 2-2 Cover Bracket
- 2-3 Wall Mounting Bracket

#### GPD Adjustment Overview:

- 3-1 Adjuster
- 3-2 Hanging Button
- 3-3 Horizontal Adjusting Hole
- 4-1 Installation Bracket
- 4-2 Vertical Adjusting Button
- 4-3 Installation Arm
- 4-4 Adjustable Nut
- 4-5 Sliding Installation Button
- 4-6 Installation Base

#### Accessories:

3-3

4-3

- ① M3X30 Philips Screw (4pcs)
- ② M4X30 Philips Screw (4pcs)
- ③ M5X30 Philips Screw (4pcs)
- 4 M5X8 Philips Screw (2pcs)
- 5 M6X12 Anti-Slip Screw (2pcs)
- 6 M5X10 Philips Screw (5pcs)
- 7 M6X35 Tapping Screw (4sets)
- ® Ø 6X50 Wood Screwn (4sets)




3-2

4-5

www.grandviewscreens.com.au

# **GV** Adjustable Short Throw **Projector Mount**

## **Instruction Manual:**

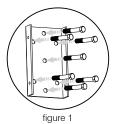




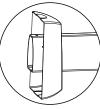


figure 3

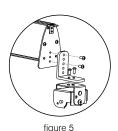

1. Attach the Wall Mounting Bracket to the required height using appropriate fasteners (figure 1).

- 2. Attach the Lower Bracket to the Wall Mounting Bracket ensuring all the required cables are 'feed' through the desired slots (figure 2).
- 3. Insert the Lower Cap over the end of the Main Arm then continue 'feeding' cables through the Main Arm and out the base of the Extender Arm (figure 3).
- 4. Attach the lower Main Arm to the Lower Bracket (figure 4).
- 5. Attach the "L" Bracket to the endplate of the Extender Arm (figure 5).

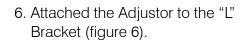




figure 2


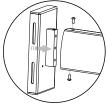




figure 6



7. Mount the projector to the Installation Bracket and then attach to the Installation Bracket, with the Projector to the Adjuster (figure 7).

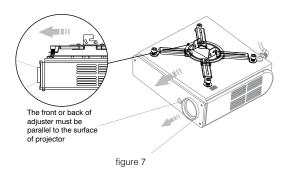

8. Fasten all screws firmly and fit off the Top Cap (figure 8).

