


LP Morgan CineTheatre Mirage Screen manual

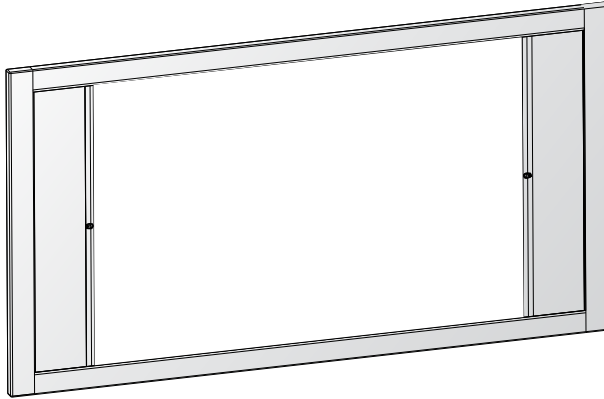

Installation Instructions For LPM39H132S

Table of contents

To the owner	3
Unpacking	4
Assembly instructions	5-7
Mounting the screen	8-9
Screen care	10
Warranty information	11

Information in this document is subject to change without notice.

© Herma Technologies. All rights reserved.

This document is protected against unauthorised copying electronic or otherwise.

Trademarks used in this text: Herma, the Herma Logo, Galleria, LP Morgan and LP Morgan logo are registered trademarks of Herma Technologies.

Other trademarks and trade names used in this document remain the property of the relevant owners.

August 2011 Version 1


LP Morgan Cinetheatre Mirage Screen Manual

To the owner


Congratulations on purchasing an LP Morgan CineTheatre Projection Screen. This cinema quality screen uses the finest optical and mechanical components to give you a truly cinematic experience.

Please take a moment to review this manual, as it will ensure you many years of service from your new LP Morgan CineTheatre Projection Screen.


Required tools and parts

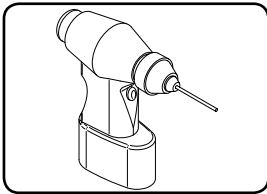

Electric drill with drill and driver bits

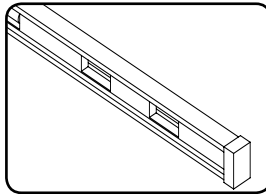









Spirit level and pencil for marking

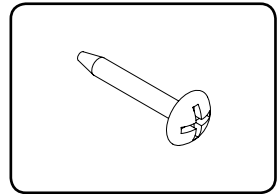

Screws to suit your wall type

Unpacking the Frame Screen

Supplied parts (accessories list)

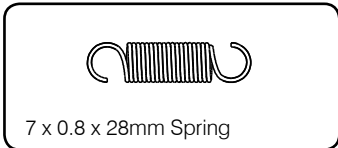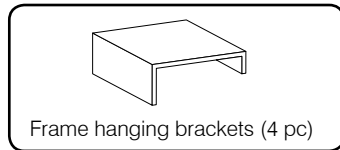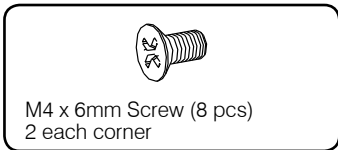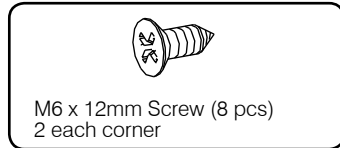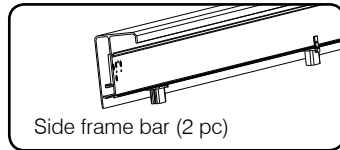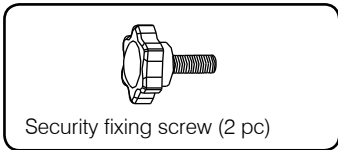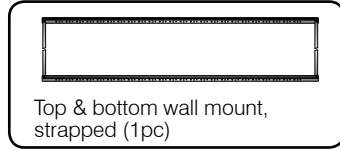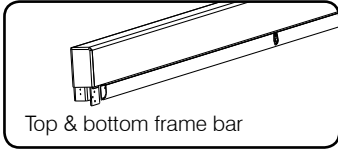


Assembling the screen

Locate a suitably safe working environment to unpack the screen, (clean carpeted floor - would be ideal). Check that all parts have been received as per the “accessories” list and assemble the screen in accordance with the following instructions.

Step 1 - Frame assembly

Arrange the frame face down as per Figure 1. The frame's corners are usually marked with corresponding numbers, (e.g. the bottom corner of the side frame bar - No.1 connects to the bottom corner of the bottom frame bar - No. 1, etc.).

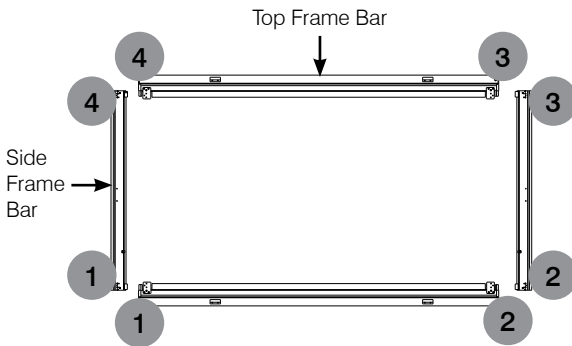

It's recommended to complete one side, (top & bottom) before moving on to the opposite side, (e.g. connect corners 1 and 4 before connecting corners 2 and 3 – or vice versa).

Figure 1.

Step 2 - Masking panel assembly

Insert the Masking Panel wheel into the groove of the frame and ensure the connecting board 1 and connecting board 2 align correctly before pulling the whole corner together. Once the corner is aligned, secure the corner with the Tapping screws (Figure 2).


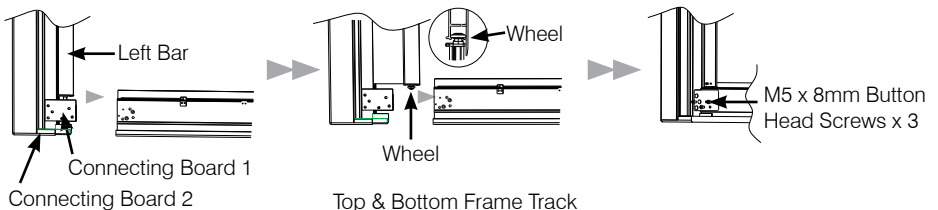


Figure 2.

Step 3 - Secure frame corners

Secure the remaining corners to complete the frame assembly (Figure 3).

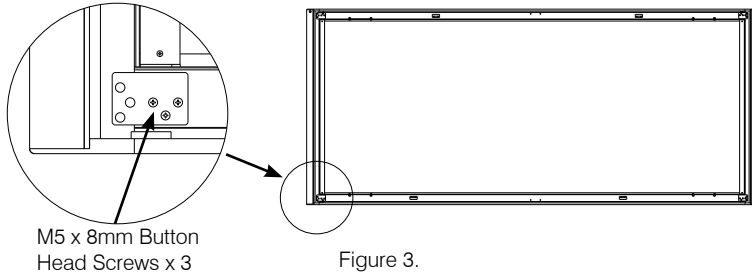

Step 4 - Screen fabric assembly

Unroll the fabric; taking the greatest of care to protect the screen from any damage. Damage caused to the screen during installation is not covered under warranty.

The front of the screen should be laid 'face down' onto the back of the already assembled frame (Figure 4).

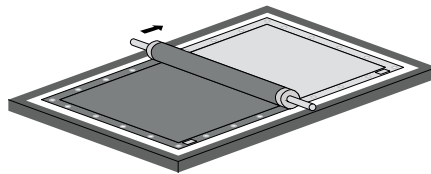


Figure 4.

Step 5 - Tensioning the frame

Insert the tension rods through the pockets in the screen fabric. It is recommended that this step be completed by two people, one to hold the fabric and the other to push the tension rods through.

Clip the springs onto the tension rod through the eyelets of the fabric and then secure the other end of the spring onto the frame (Figures 5 – 7).

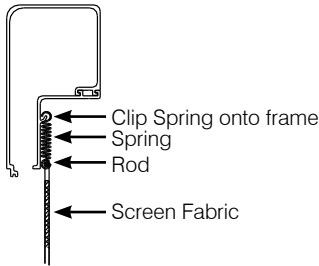


Figure 5. Installation for spring of side frame bar

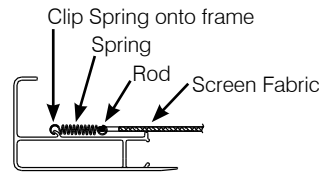


Figure 6. Installation for spring of top and bottom frame bar

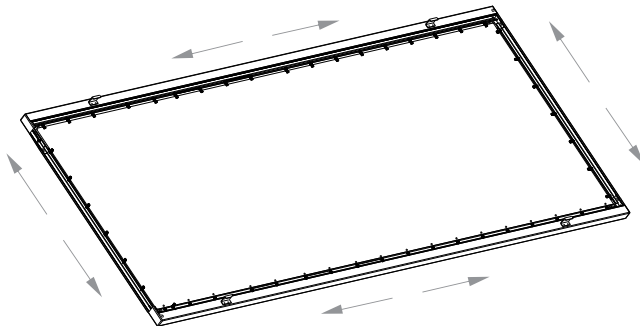


Figure 7.

Mounting the screen

The screen has two 1600mm long wall mounts strapped together (Figures 8 and 9).

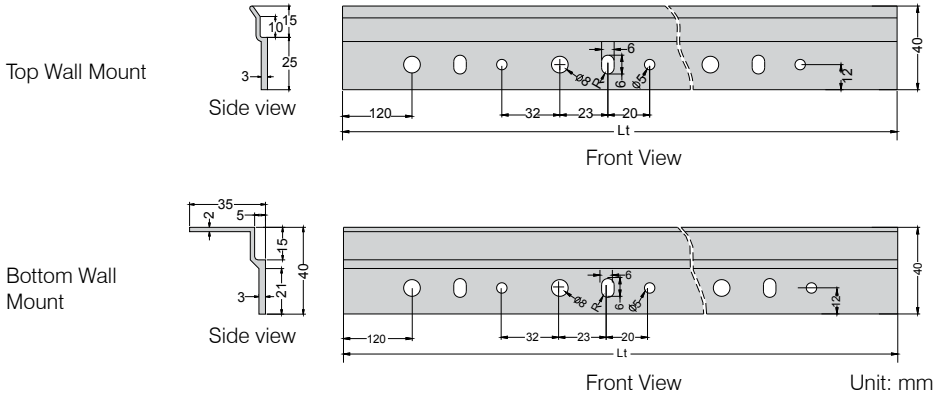


Figure 8.

The top and bottom wall mounts must be mounted horizontally at 1412mm apart, (Figures 9 and 10).

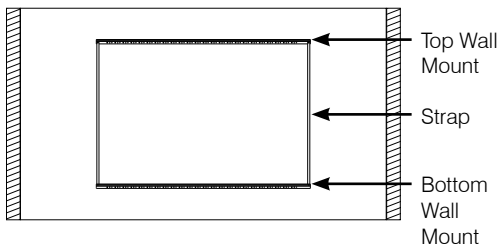


Figure 9.


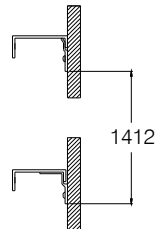


Figure 10.

The screen has four frame hanging brackets which fasten in to the back of the top and bottom screen frames (2 each). The frame hanging brackets hook on to both wall mounts.


The lower hanging bracket secures the screen to the wall mounting bracket using a security fixing screw. The security fixing screw fastens behind and under the bottom screen frame. It is inserted through the slot on the wall mount and into the threaded hanging bracket (Figures 11 and 12).

Figure 11.

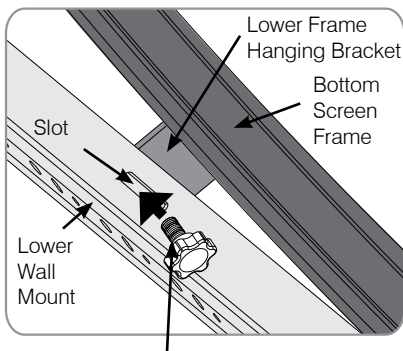

Insert Security Fixing Screw through slot in lower wall mount

Figure 12.

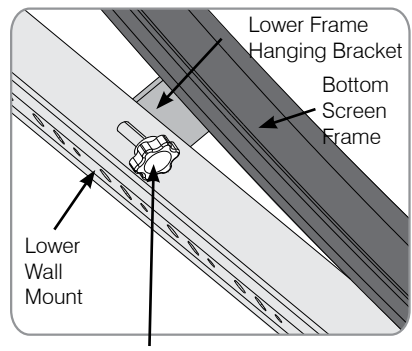

Fasten Security Fixing Screw into threaded hanging bracket

Screen care

Cleaning your screen surface

- Never use solvents, chemicals or abrasive cleaners on the screen.
- Never use a scraper, razor blade or other sharp object to clean the screen.
- Use a soft cloth to remove any loose dirt or dust particles.
- Clean the screen with a mild detergent solution and a sponge or lint free cloth. Dab lightly to remove any stubborn marks, then blot with a damp sponge to absorb excess water. Dab off the detergent with clean water and dry with a soft cloth or towel. Do not let the detergent dry on the screen.

Cleaning your frame

- The flocked velour frame should only be cleaned using a lint brush to remove any dust on the frame

Please note:

Shading can be visible as reflective bands of light flocking when viewed at an acute angle to the screen frame and is an acceptable condition of the process in manufacturing velvet flocking.

Warranty information

Keep your original receipt for warranty.

Please fill out the online warranty form in order to qualify for the manufacturer's warranty.

<http://www.lpmorgan.com.au/owners.html>

The warranty covers defects in workmanship and materials, provided this product has been installed in a normal environment and maintained according to the written instructions. Herma warrants the product against loss of usefulness, discolouration or deterioration of optical quality within the warranty period as a result of manufacturing or material defects. This warranty applies only within Australia.

Please return your goods to the place of purchase for all warranty claims.

Conditions

Any equipment replaced pursuant to the terms of this warranty shall be retained by Herma.

All costs related to de-installation and re-installation of the product covered by this warranty are not the responsibility of Herma Technologies. Herma will not be responsible for any consequential damages during or following installation procedures.

Herma is not responsible for any freight costs relating to repair or replacement. Equipment must be returned to Herma in suitable packing to prevent damage in transit. Herma will not accept any responsibility for damage to the equipment caused by inadequate or unsuitable packing, or for any damage howsoever caused whilst the goods are in transit.

Herma Technologies shall not be liable for any injury, loss or damage, direct or consequential, arising out of the use of, misuse of, or inability to use, the equipment.

This Warranty does not cover any product which has been subjected to misuse, abuse, neglect, accidental or intentional damage, improper voltage or any alteration which affects the reliability or performance of the equipment not attributable to faulty manufacture, parts or labour and without limiting the generality of the foregoing.

This Warranty does not cover any product where usage, adaptation or installation are not in accordance with our written installation and operating instructions.

Warranty Periods:

One year from date of purchase.

**For more information on our range of products,
please visit www.lpmorgan.com.au, or contact
your local LP Morgan Retailer.**

Factory 4a, 6 Albert Street Preston Vic 3072

Phone: +61 3 9480 6233 **Fax:** +61 3 9480 6533

Email: info@herma.com.au www.lpmorgan.com.au

August 2011 Version 1

