

LP Morgan

Screenboard

user manual



Notes and Cautions



TIP: A tip indicates important information that helps you make better use of your screen.



WARNING: A notice indicates potential damage to wall, ceiling or projector and tells you how to avoid the problem.



DANGER: Indicates a potential for property damage, personal injury or death.

Table of contents



Important information

Unpacking 3

Installation



Assembly instructions 4

Appendix



Whiteboard Use 6

Warranty Information 7

To the owner

Congratulations on purchasing an Australian made **LP Morgan Screenboard Projection Screen**.

Please take a moment to review this manual, as it will ensure you many years of trouble-free service from your new LP Morgan Screenboard.

Information in this document is subject to change without notice.

© 2002-2006 Herma Technologies. All rights reserved.


Reproduction in any manner whatsoever without permission of Herma Technologies is strictly forbidden. Trademarks used in this text: Herma, the Herma Logo, Galleria, **LP Morgan** and **LP Morgan** logo are registered trademarks of Herma Technologies.

Other trademarks and trade names may be used in this document to refer to either the entities claiming the marks and names or their product. Herma Technologies disclaims interest in trademarks and trade names other than its own.


Unpacking the Screenboard

Supplied


1 x Pre-Assembled Screenboard Frame with Acrylic Screen.

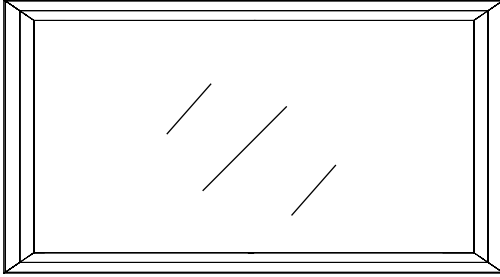


1 x 4mm Allen Key

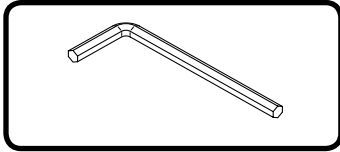


4 x Hanging Tabs

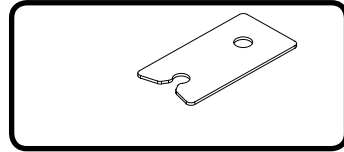


4 x M6 Cage Nuts with BH bolts (nuts pre installed)

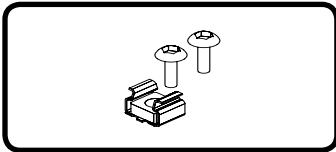


1 x Ezymount Rail

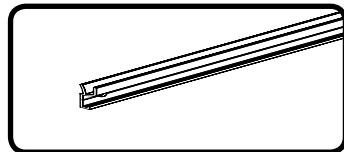


Required

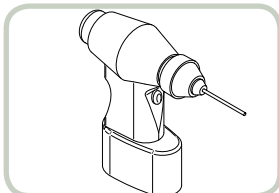

Electric drill Screw Driver

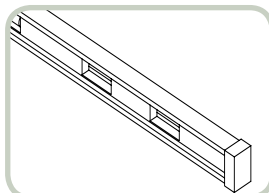

Spirit Level

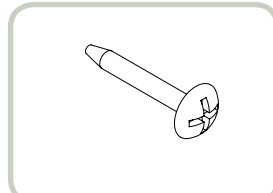

At least 3 x Screws to suit Wall type.


Assembly Instructions

Ezy-mount Installation


Ensure height of mounting holes are 23mm below the height at which the top edge of the frame will be. Using spirit level, secure ezy-mount to wall or mounting surface.

Important information

Ezymount installation using spirit level.

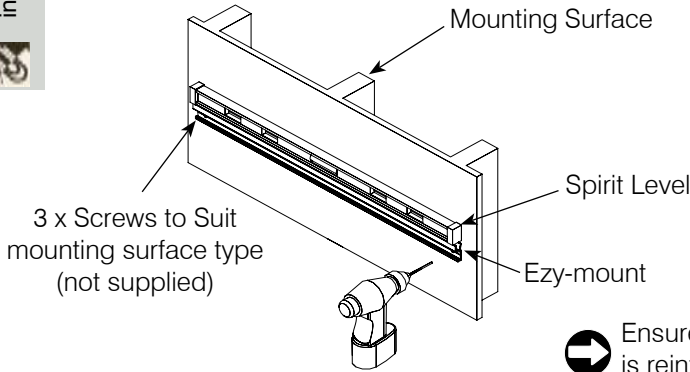


Profile view detail of ezy-mount installation

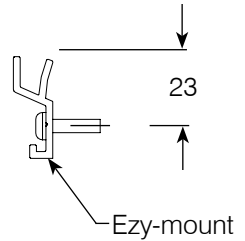


➔ Ensure that the mounting surface is reinforced and can support the weight of the frame, e.g. use wall studs. Do not simply mount onto a plaster wall.

Placing the frame onto the ezy-mount rail


Hook the screen on to the top edge of the Ezy-Mount at a 15° angle from the vertical. Carefully tilt frame towards wall and slowly release.

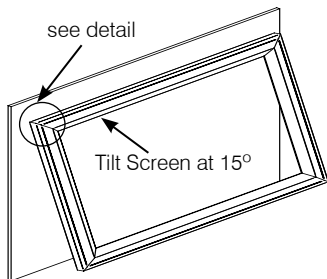

mounting detail

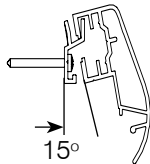

Now sit back and enjoy the big screen experience!

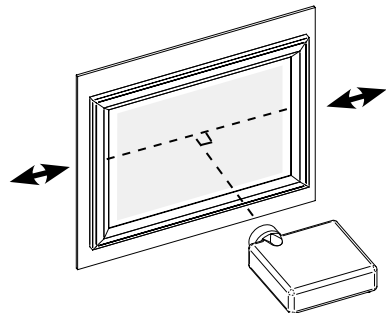

You can slide screen sideways until it lines up with the image horizontally. Make sure the projector sits perpendicular to the screen.

Assembly Instructions


Installing and using hanging tabs

Hanging tabs can be used to secure the Screenboard in a fixed position. This can be done either in conjunction with the ezy-mount in place or with the hanging tabs on their own.

We recommend that each hanging tab be placed at or near the corner of the frame. This is to ensure maximum stability of the frame.

Hanging tab attachment to frame detail.

Note: Fasteners from hanging tab to mounting surface are not included.

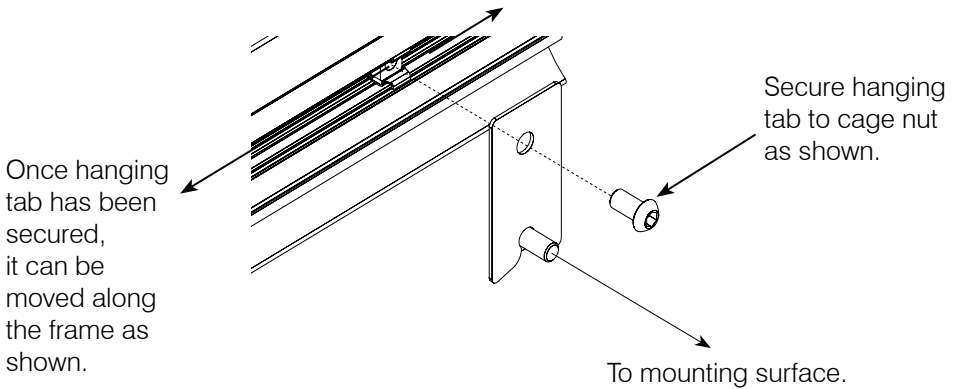

If using hanging tabs in conjunction with ezy-mount, be sure to use 6mm spacers between the mounting surface and each hanging tab.



Whiteboard Use and Screen Care

Cleaning your screen surface

Screenboards are only suitable for use with dry erase or wipe dry markers

To clean the surface when using as a whiteboard there are several options-

- A clean dry cloth will remove the dry eraser mark
- Dampening your clean cloth will also remove the dry eraser mark
- For stubborn marks use methylated spirits and a clean dry cloth



Important note: Never use scourers or abrasives to clean your screen.

To avoid damage to your projection and whiteboard surface do not use cleaning agents that -

- Are abrasive! You can damage the A/R coatings.
- Contain acetone or dichlormethan

Cleaning your frame

- If your frame is powder-coated or anodised, use water with a mild detergent or methylated spirits and a soft cloth to wash off any marks. Rinse and dry with a clean cloth or towel. Take care not to wet the screen surface.
- If your frame features a flocked velour finish, use a lint brush to remove any dust on the frame.

Warranty Information

IMPORTANT NOTE: You must keep your original receipt for warranty.

Customers must fill out the online warranty form, or the warranty card included with the product and post it back to Herma at the reply paid address shown on the back cover in order to qualify for the manufacturer's warranty.

www.herma.com.au/warranty

The warranty covers defects in workmanship and materials, provided this product has been installed in a normal environment and maintained according to the written instructions. Herma warrants the product against loss of usefulness, discolouration or deterioration of optical quality within the warranty period as a result of manufacturing or material defects. This warranty applies only within Australia.

CONDITIONS –

Herma will repair or replace, with the least possible delay, any defective equipment. Any equipment replaced pursuant to the terms of this warranty shall be retained by Herma

All costs related to installation and re-installation of the Herma Technologies equipment covered by this warranty are not the responsibility of Herma Technologies. Herma will not be responsible for any consequential damages during or following installation procedures.

The user is responsible for any freight costs relating to repair or replacement. Equipment must be returned to Herma in suitable packing to prevent damage in transit. Herma will not accept any responsibility for damage to the equipment caused by inadequate or unsuitable packing, or for any damage howsoever caused whilst the goods are in transit.

Herma Technologies shall not be liable for any injury, loss or damage, direct or consequential, arising out of the use of, misuse of, or inability to use, the equipment.

This Warranty does not cover any equipment which has been subjected to misuse, abuse, neglect, accidental or intentional damage, improper voltage or any alteration which affects the reliability or performance of the equipment not attributable to faulty manufacture, parts or labour and without limiting the generality of the foregoing shall not apply where the defect arose as the result of the following circumstances:

This Warranty does not cover any equipment where usage, adaptation or installation (including wiring of electrical connections) are not in accordance with our written installation and operating instructions.

Warranty Periods:

- Galleria Frame and Assembly Hardware: 2 years from date of purchase.
- Screen Surface: 1 year from date of purchase.



Your **LP Morgan** Retailer is able to provide information on your product. If we can be of any further help, please contact us.



Factory 4a, 6 Albert Street Preston Vic 3072

Phone: +61 3 9480 6233 Fax: +61 3 9480 6533

Email: info@herma.com.au

Web: www.herma.com.au | www.lpmorgan.com.au