

Step 6


Screw Ezy-Mount on the wall with 3 x screws; make sure it is level.

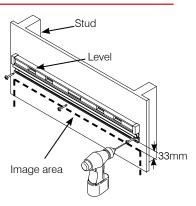


Step 7

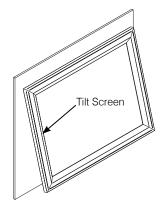

Hook screen onto top edge on Ezy-Mount 15° from vertical then let it drop into position.



Step 8

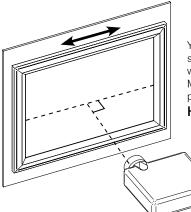

You can slide screen sideways until it lines up with the image horizontally. Make sure projector sits perpendicular to the screen.

Happy Viewing!



Protecting Your Screen:

- Keep away from direct sunlight or high temperatures.
- Examine both the front and back surfaces before retracting into the case to make sure it is free of dust, dirt, insects or other foreign matter.
- Use a soft brush or cloth to lightly remove any foreign particles.

Cleaning Your Screen:

- Do not use any solvents, chemicals or abrasive cleaners on the screen surface.
- Use a mild detergent with warm water to remove any marks on the surface or screen case.
- Always immediately dab the screen with a lint free soft cloth to avoid soap marks.
- Do not scrub the surface.

Warranty: 12 Months

Manufactured in Australia by:

Herma Technologies

Factory 4A, 6 Albert St Preston, VIC 3072 Phone: 1300 730 025

For more information please go to:

www.grandviewscreens.com.au







Grandview Powdercoated Frame Screen User Manual


Required (not supplied)











Supplied parts




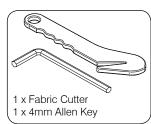


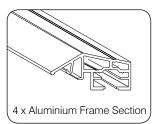

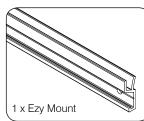

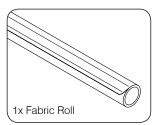




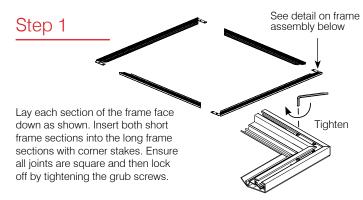

Step 2

With frame still face down place fabric roll on edge of frame and roll fabric off the roll.

Take note of "Viewing Side" label on fabric




Step 3

Stretch fabric over the back of the frame. Push the Ezy-Grip through fabric into the v-channel.

Tip:


Insert the Ezy-Grip in the order shown above. Start at the edge of a Ezy-Grip length, but in the middle of the frame.

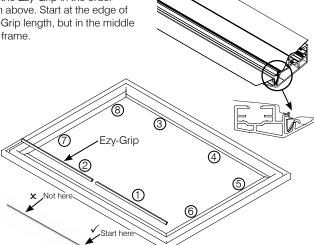


Step 4


If creases or ripples have developed in the screen surface, don't panic. You can easily re-tension the fabric by pressing and holding the Ezy-Grip to release the fabric. To re-tension the fabric see the diagrams below.

To release the Ezy-Grip push the handle forward then lift up to remove. The fabric is now ready to be re-tensioned.



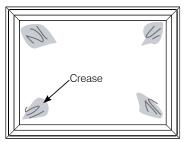

To re-tension the fabric, re-insert the Ezy-Grip and secure the fabric once more.





Step 5

